

# CLONE LOOPER CHEATSHEET

### Recording a Loop



To begin recording a loop, press the “REC/DUB” footswitch. The light above the switch will turn red to indicate that you are recording.

### Play or Stop Recording



When you want to stop the loop and play it back, press the “PLAY/STOP” footswitch. The light above it will begin flashing green.

### Clear Loop



To clear an entire loop quickly with the MXR Clone Looper Pedal, press and hold the “REC/DUB” footswitch. To clear a single layer, simply press and hold the “PLAY/STOP” footswitch.

### Overdub



Press the “REC/DUB” during playback to begin overdubbing. It will flash red when it's in the middle of overdubbing.

### Delete Dub



Just hold the “PLAY/STOP” button as shown here to delete the dub that was over your recording.

### Return Dub



If you've recorded a dub with the Clone Looper from MXR and you've decided that you want to bring it back after having deleted it, hold down the “PLAY/STOP” button for the second time to have it return.

## Clear Loop Quietly

When the pedal is not in playback or recording:

- 1) Hold the volume switch for 5 seconds then..
- 2) Press the REC/DUB to quietly erase the loop



## Half Speed



Press the Volume button once to engage Half-Speed.

## True Bypass/Buffered Bypass

Hold the volume switch down while plugging in the power supply to switch between True & Buffered Bypass



Hold the volume switch down while plugging in the power adapter to switch between True Bypass and Buffered Bypass.

# CLONE LOOPER CHEATSHEET

## Double Speed

Press the VOL knob twice to engage double-speed



To double the speed instead of cutting it in half, press the volume knob twice and you'll see the blue light flashing a bit faster.

## Volume

Adjust Loop volume here



Turn the dial left to decrease the volume and turn it to the right to increase it.

# TRAVELING GUITARIST

## Reverse



Press and hold for 2 seconds

To use the Reverse feature on the Clone Looper, start by pressing the "PLAY/STOP" button to begin your loop. Then press and hold down the volume knob for approximately two seconds. You'll see the yellow "REVERSE" light come on 07:04.

## Control & Expression

These are 1/4" jacks



The CTL Jack is for the MXR Tempo Switch, which allows you to control the features of the pedal. The EXP Jack is for expression pedals, including universal pedals like the M-Audio EX-P.